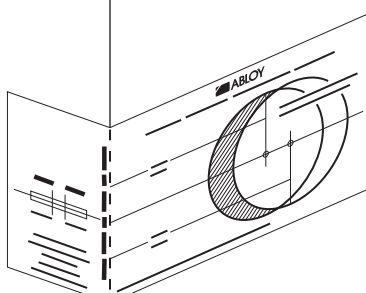
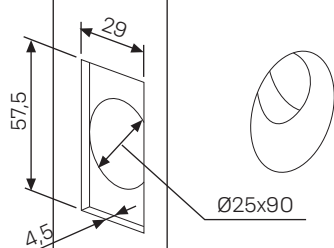
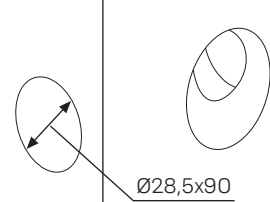
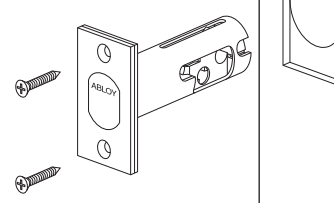
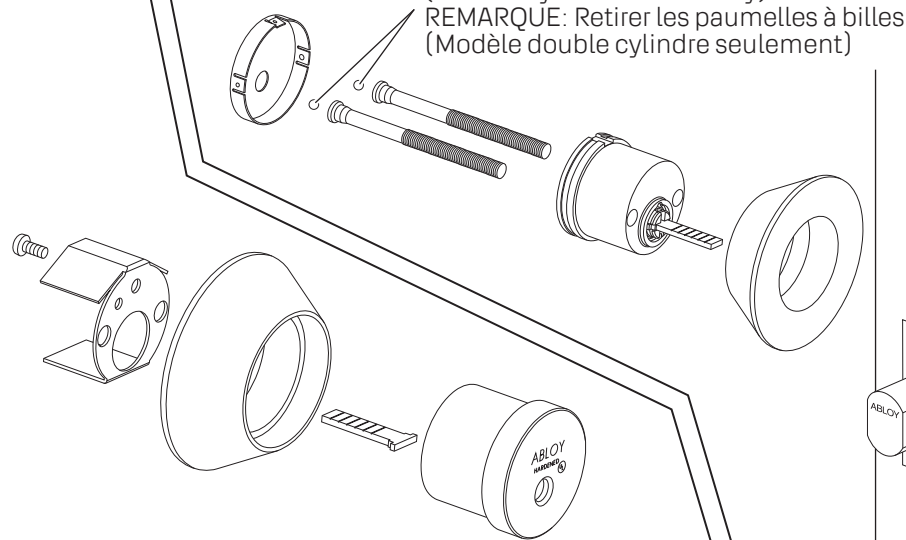
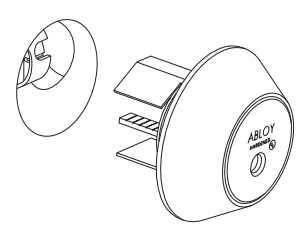


# ME151, ME152

## TUBULAR DEADBOLT INSTALLATION INSTRUCTIONS

## NOTICE D'INSTALLATION DU PÊNE DORMANT TUBULAIRE


| A | INSTALLATION OF THE BOLT AND CYLINDERS / INSTALLATION DU PÊNE ET DES CYLINDRES                                                                                                                                                                                                                                        | ET DES CYLINDRES                                                                                                                                                                                                                                                                                                                                   |
|---|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 |  <p>Use template included.<br/>Utiliser le gabarit fourni.</p>                                                                                                                                                                       | <div data-bbox="638 257 1085 784"> <p>2</p> <p>Standard Bolt<br/>Pêne standard</p>  </div> <div data-bbox="1085 257 1503 784"> <p>Drive-In Bolt<br/>Pêne encastré</p>  </div> |
| 3 | <p>Standard Bolt<br/>Pêne standard</p>                                                                                                                                                                                             | <p>Drive-In Bolt<br/>Pêne encastré</p>  <p>Piece of wood, plastic or rubber.<br/>Morceau de bois, de plastique ou de caoutchouc.</p>                                                                                                                           |
| 4 | <p>5</p> <p>NOTE: Removing ball bearings will require extreme measures.<br/>(Double cylinder model only)<br/>REMARQUE: Retirer les paumelles à billes avec la plus grande précaution.<br/>(Modèle double cylindre seulement)</p>  |                                                                                                                                                                                                                                                               |

# ME151, ME152


## TUBULAR DEADBOLT INSTALLATION INSTRUCTIONS

## NOTICE D'INSTALLATION DU PÊNE DORMANT TUBULAIRE

### B STRIKE INSTALLATION / INSTALLATION DE LA GÂCHE

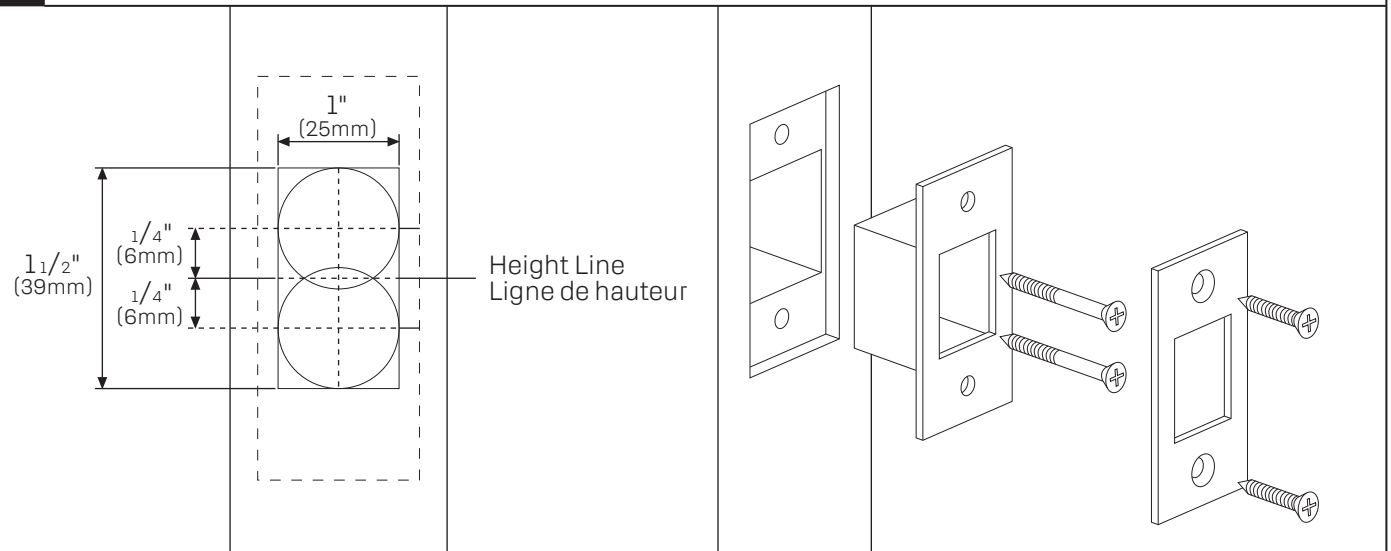

### C CHANGING BACKSET OF THE BOLT / MODIFICATION DU RETRAIT DU PÊNE

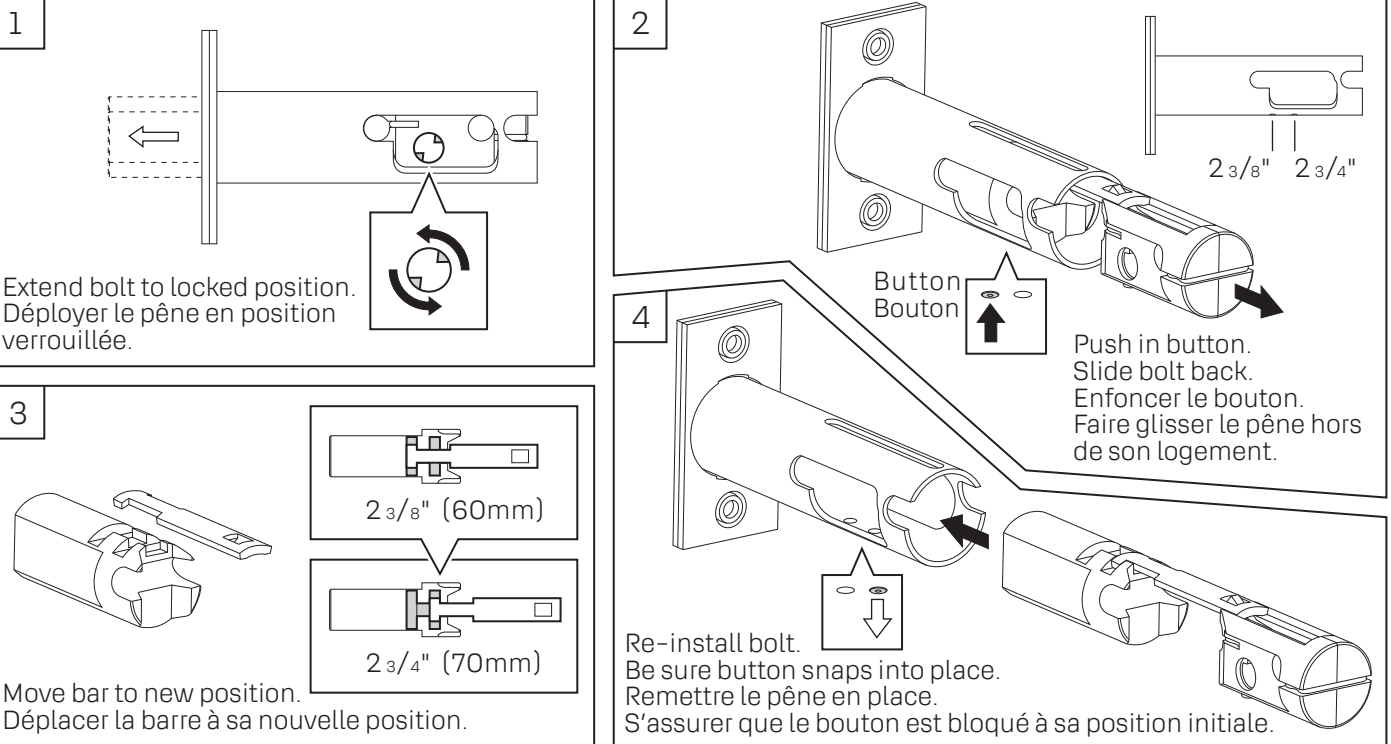

### D ADAPTER RINGS / RONDELLES D'ADAPTATION

