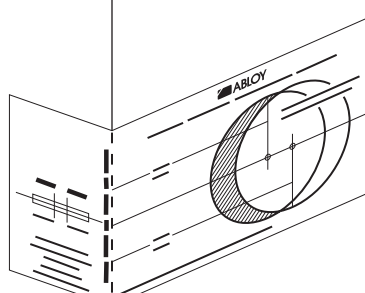
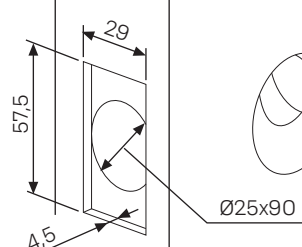
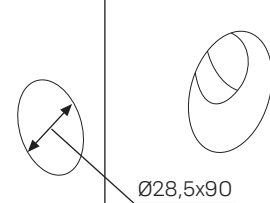
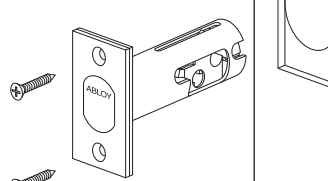
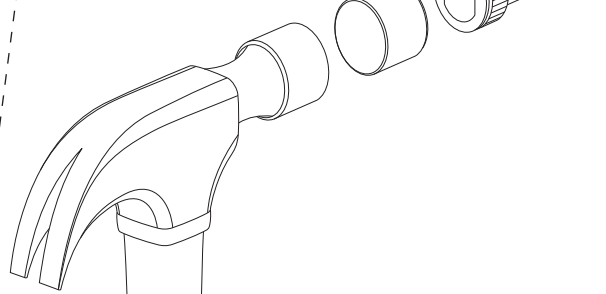
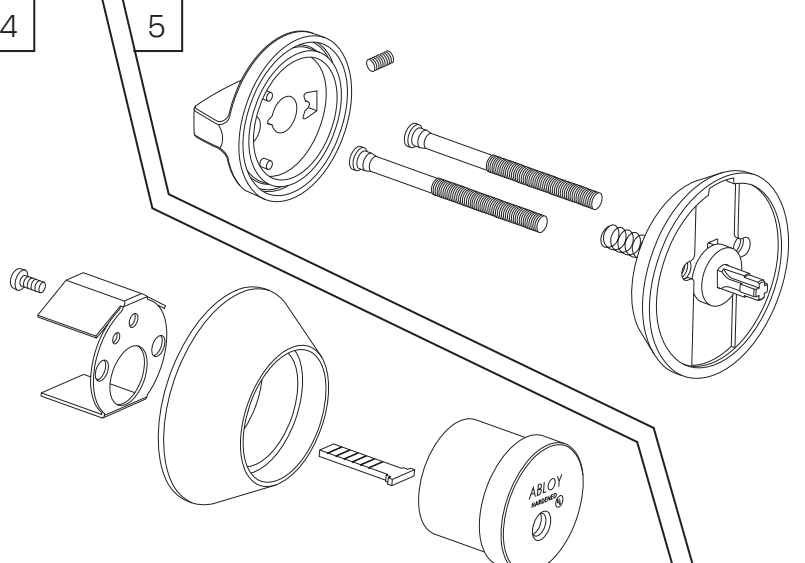
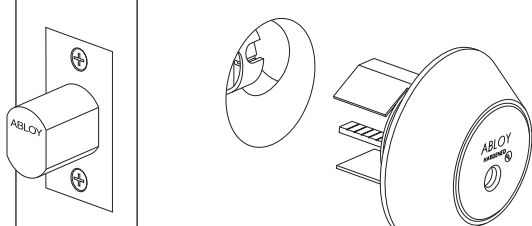


ME153, ME154

TUBULAR DEADBOLT INSTALLATION INSTRUCTIONS


NOTICE D'INSTALLATION DU PÊNE DORMANT TUBULAIRE

A INSTALLATION OF THE BOLT AND CYLINDERS / INSTALLATION DU PÊNE ET DES CYLINDRES			
1	 Use template included. Utiliser le gabarit fourni.		
2	Standard Bolt Pêne standard 	Drive-In Bolt Pêne encastré 	
3	Standard Bolt Pêne standard 	Piece of wood, plastic or rubber. Morceau de bois, de plastique ou de caoutchouc. 	
4			
5			


ME153, ME154

TUBULAR DEADBOLT INSTALLATION INSTRUCTIONS NOTICE D'INSTALLATION DU PÊNE DORMANT TUBULAIRE

B STRIKE INSTALLATION / INSTALLATION DE LA GÂCHE

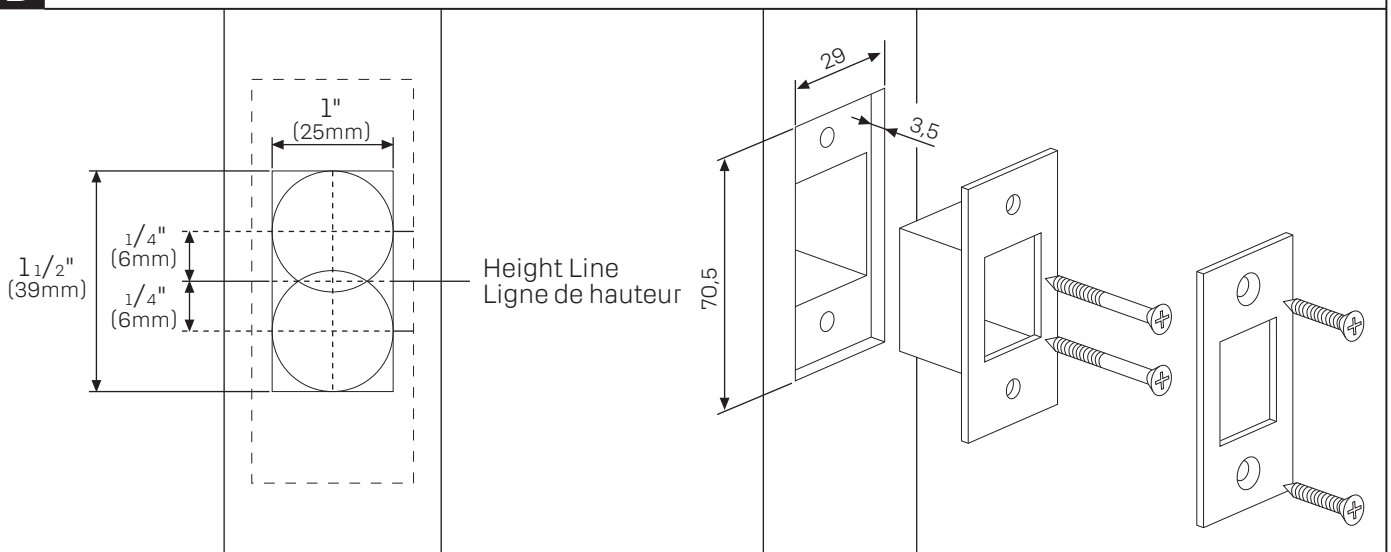

C CHANGING BACKSET OF THE BOLT / MODIFICATION DU RETRAIT DU PÊNE

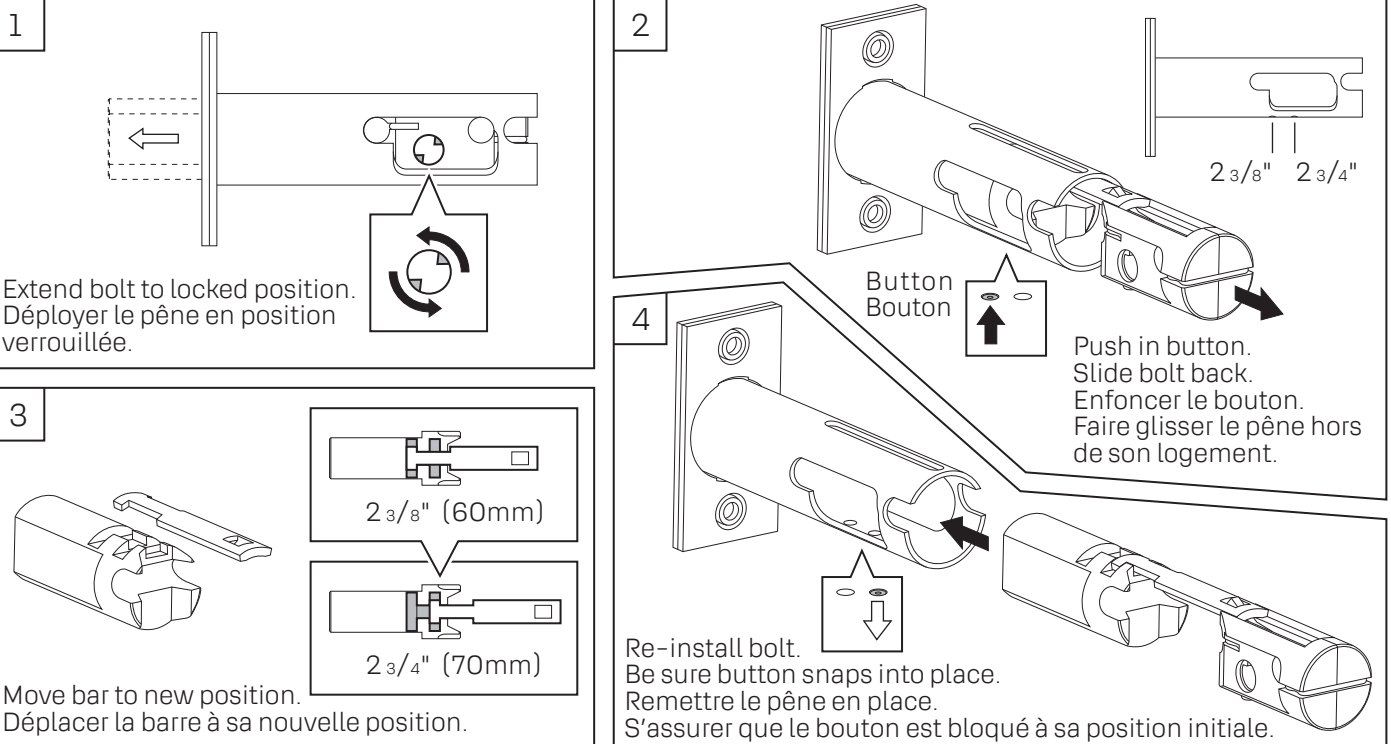

D ADAPTER RINGS / RONDELLES D'ADAPTATION

