


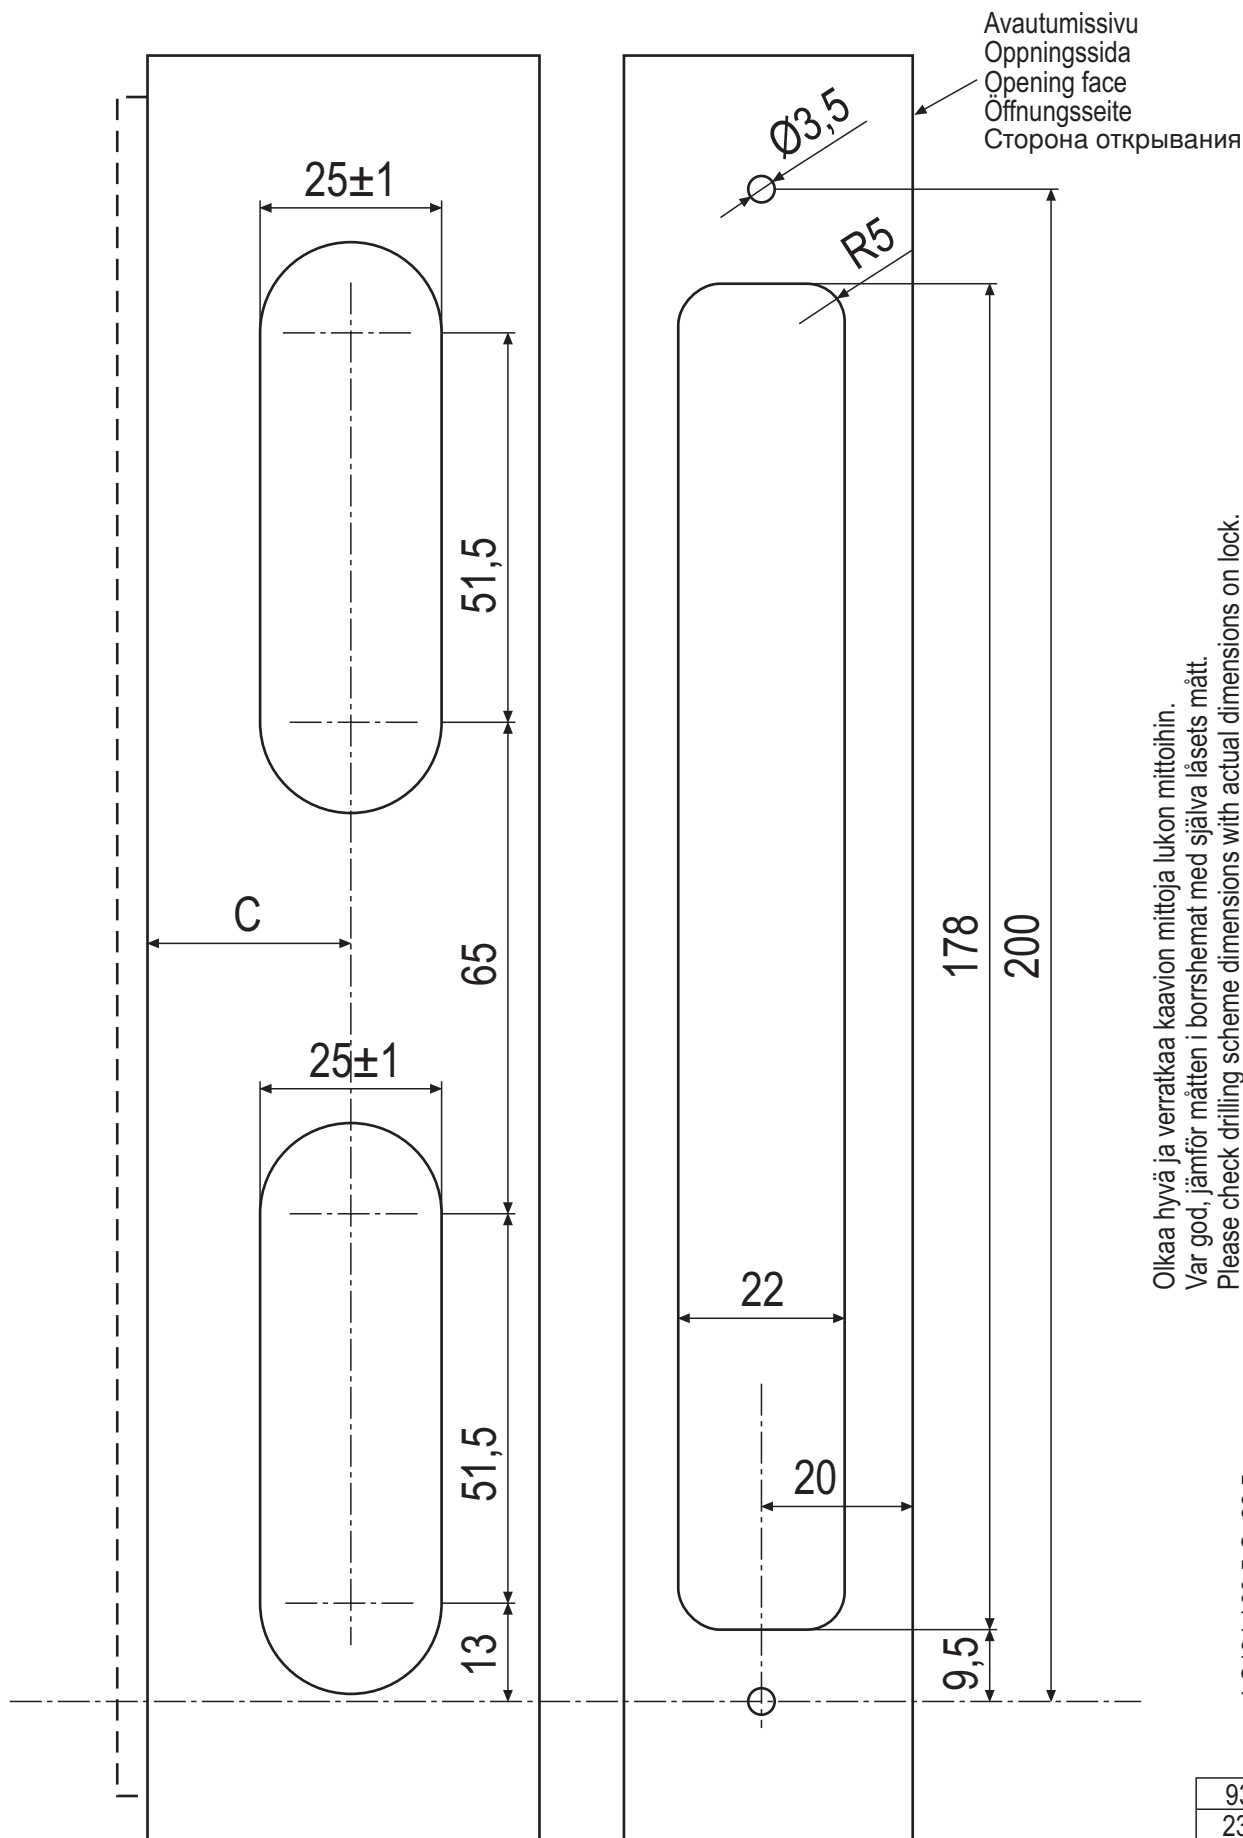

Olkaa hyvä ja verratkaa kaavion mittoja lukon mittoihin.
Var god, jämför måtten i borrhemat med själva låsets mått.
Please check drilling scheme dimensions with actual dimensions on lock.
Bitte Masse im Bohrschema mit Abmessungen am Schloss selbst vergleichen.
Сравните, пожалуйста, размеры в схеме с размерами замка.

LC131 / 30,5 C=26,5
LC131 / 35 C=31




ASENNUSOHJE
MONTERINGSANVISNING
INSTALLATION SCHEME
MONTAGEANWEISUNG
ИНСТРУКЦИЯ ПО МОНТАЖУ

LC130
LC131
LC132

KIINNITYSJÄRJESTYS
MONTERINGSFÖLJD
INSTALLATION PROCEDURE
EINBAUFOLGE
ПОРЯДОК КРЕПЛЕНИЯ

1-6

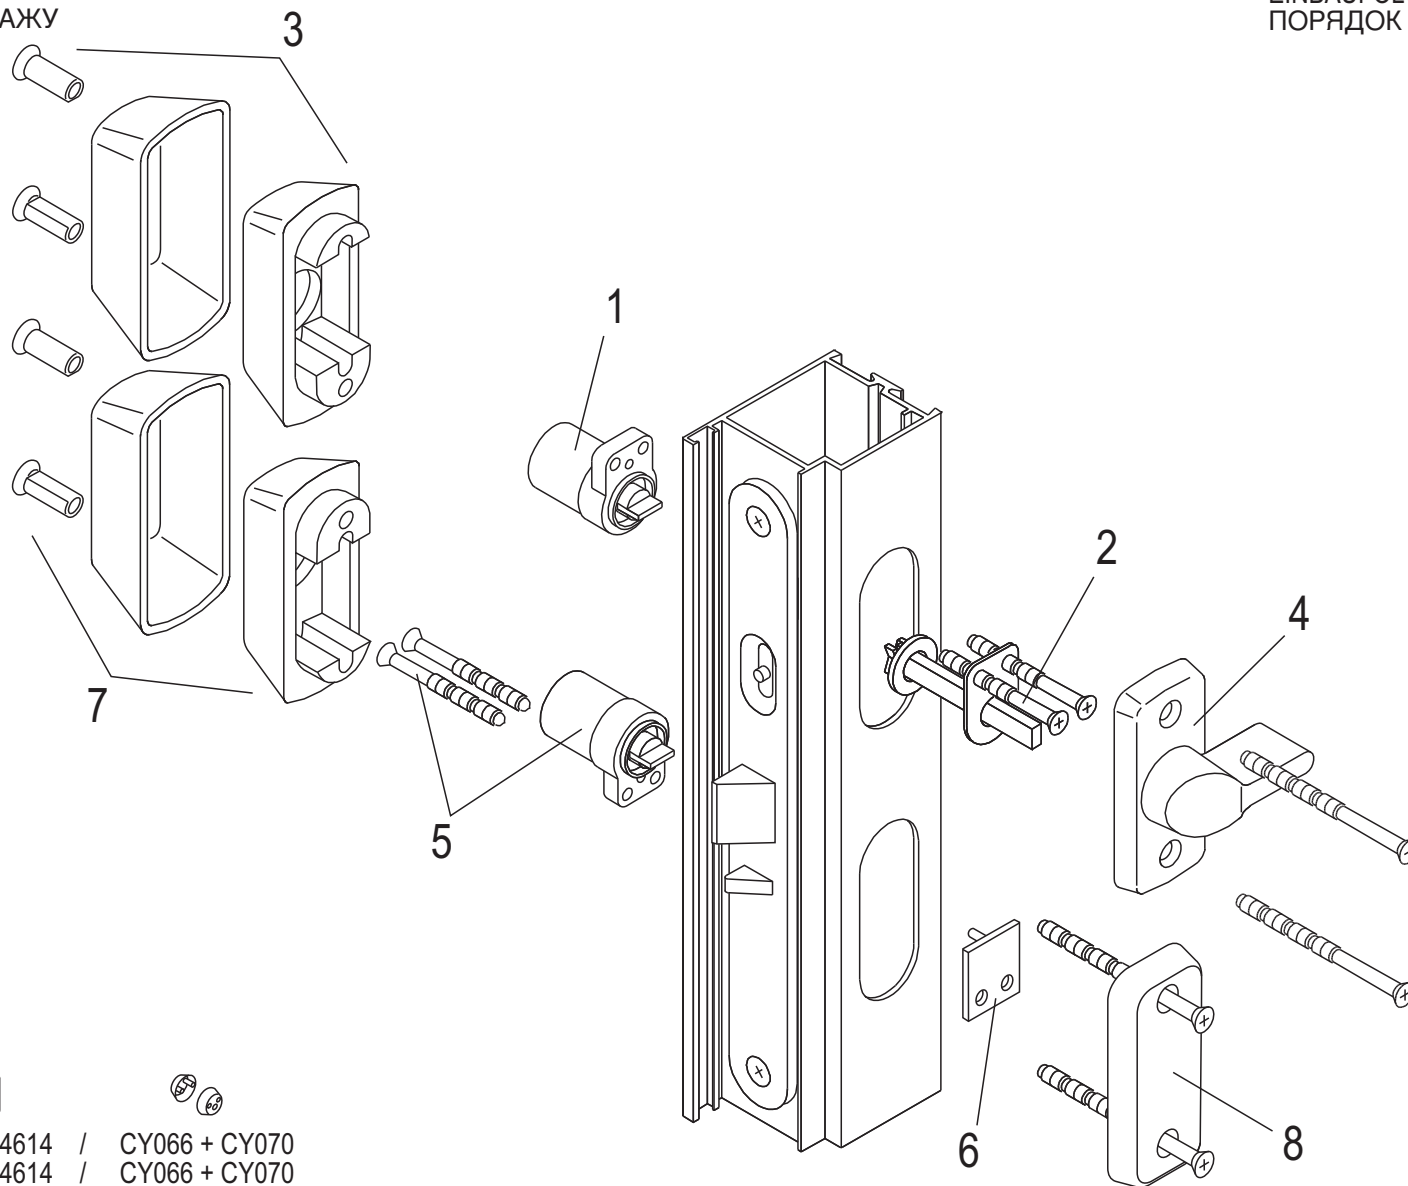

		
ME221:	LC130 / 4613, 4614 / CY066 + CY070	
ME222:	LC131 / 4613, 4614 / CY066 + CY070	
ME223:	LC132 / 4613, 4614 / CY066 + CY070	